

Cleaning of the housing contact surfaces


If the contact surfaces are damaged or dirty, the ball head might not lock properly in the housing. The key can only be withdrawn, if the ball head has locked properly.

Cleaning of the contact surfaces

Please remove all dirt and rust from the contact surfaces of the housing. An abrasive cloth with grain size 120 allows you to easily clean the contact surfaces. The contact surfaces are marked red.

ATTENTION!

Do not file off the contact surfaces. This would remove too much material and the ball head would no longer fit properly into the housing. The towbar would be damaged and would have to be replaced.

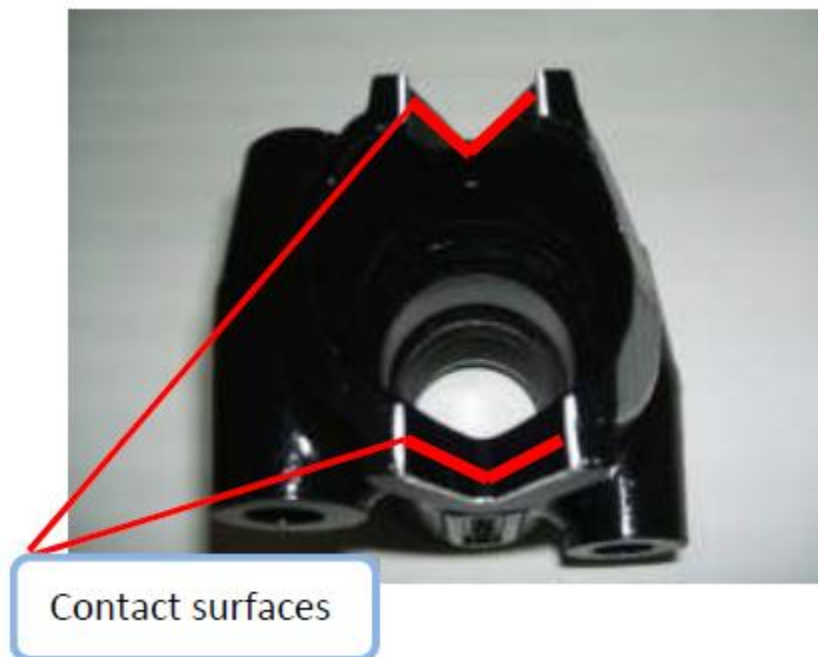

Removing damages

When the ball head is inserted into the housing, the head can get jammed. If the edges of the contact surfaces of the ball head and housing bang together, it will cause a burr. This burr can be removed carefully with a fine file. The edges of the contact surfaces of the housing are marked yellow.

ATTENTION!

Please do not file off too much. Otherwise the ball head will no longer fit properly into the housing. The towbar will be damaged and will have to be replaced.

